

Implecho Tap Board Set Up Guide

Events • Assistive Listening • Interpretation • Facility • Tours • Tourism



System Details:

This guide walks you step-by-step through setting up an Implecho Tap Station so guests can easily join the correct audio group by tapping their device.


Key System Items (Included):

- 2 ListenTalk Transceivers
 - 1 labeled **"Main"**
 - 1 labeled **"Sub-Leader"**
- 1 Tap Board
- 1 Tripod Stand
- 1 Power Bank
- 1 USB-Micro Charging Cable
- 1 iRIG XLR Cable Adapter and/or XLR Male to 1/4-inch TRS Cable

Step 1

Connect The Main Device To The Soundboard

1. Locate the **ListenTalk** device with the **red clip** labeled “Main”
2. Bring the **Main device**, the **iRIG cable**, and (if needed) the **power block and cable** to the soundboard or mixer.
3. Connect the iRIG cable to the soundboard:
 - Plug the **female XLR cable** directly into the audio output **OR**
 - Use the **XLR male-to-¼-inch TRS adapter** to connect to an **AUX port**.
4. Plug the audio jack end of the iRIG cable into the **ListenTalk Main device**.
5. Power on the Main device.
6. When ready to transmit audio, **press the center button** on the device to make sure it is **unmuted**.

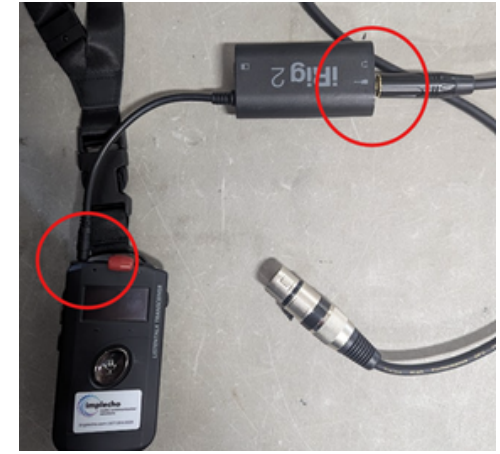

iRIG cable connection through an audio connection on the soundboard



iRIG cable connection through a laptop connection on the soundboard

Step 2

Mount The Tap Station


1. Attach the Tap Board to the **tripod stand**.
2. Adjust the tripod to the **desired height** so guests can easily tap their devices.



Step 3

Set Up the Tap Station (Sub-Leader Device)

1. Locate the **back of the Tap Board**.
2. Open the Velcro straps to access the device slot.
3. Slide the Sub-Leader ListenTalk device into the slot:
 - Make sure the device is **powered ON**
 - The **screen should face outward** so it is visible
4. Attach the **power bank** to the back of the Tap Board using Velcro.
5. Connect the power bank to the Sub-Leader device using the **Micro-USB cable**.

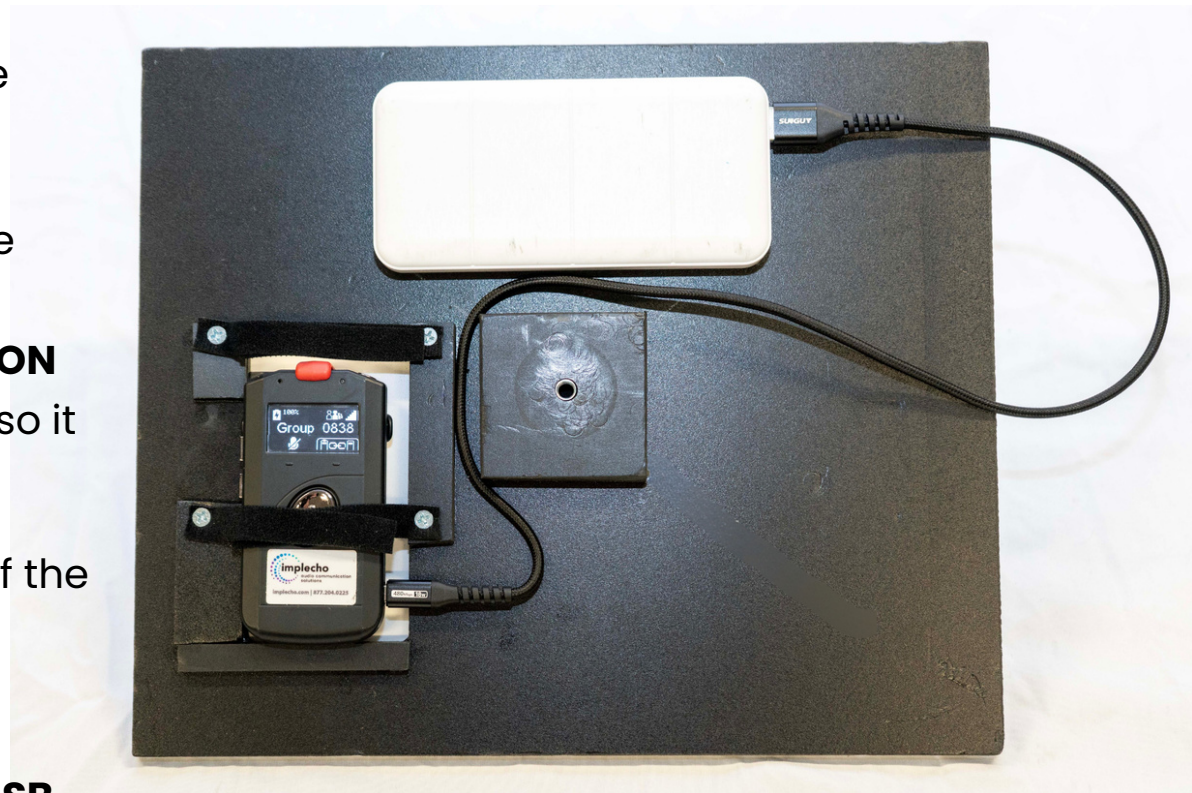

Step 4

Enable Tap-to-Join (NFC Pairing)

1. On the **Sub-Leader device**, locate the **lower-right soft button**.
2. Gently press (soft-press) this button.
3. Look for the chain-link icon to begin blinking.

Important: This function will stay active as long as the Sub-Leader device remains powered on.

When the icon is blinking, tap-to-join is active.



Step 5

Guest Instructions (How Tapping Works)

1. Guests should place **the back of their ListenTalk device** against the **Tap area** on the Tap Board. **Note** – This step will have to be repeated for every new room/area you want to listen to.
2. A **chime** will sound when pairing is successful.
3. The guest's screen will update to show the correct group/room name.
4. Now your guests are now connected and ready to listen.



Need a little extra **HELP?**
That's what we're here for.

 info@implecho.com

 877.204.0225

 implecho.com